



CE REV 001A

**High Quality Nautical Equipment**

# **DP2 SERIE PRINCE**

## **300/500/700/1000W**

**DP2 312**

**DP2 512**


**DP2 524**

**DP2 712**

**DP2 724**

**DP2 1012**

**DP2 1024**

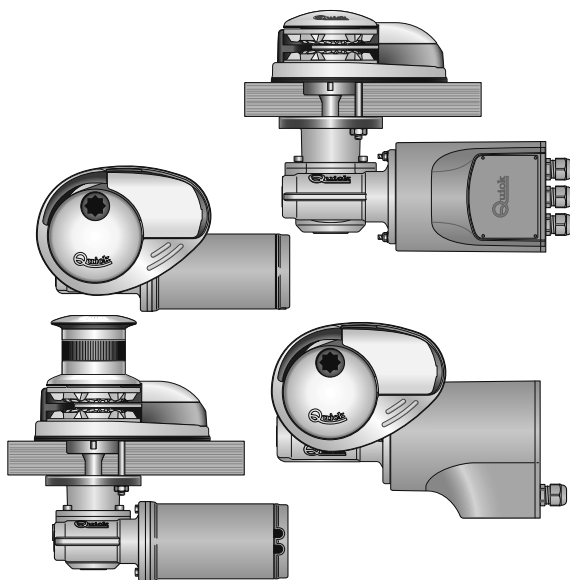

**IT**

Manuale d'uso

**GB**

User's Manual

**SALPA ANCORA VERTICALI**

**VERTICAL WINDLASSES**



## INDICE

Pag. 4	Caratteristiche tecniche
Pag. 5	Installazione
Pag. 6	Schema di collegamento 300/500W
Pag. 7	Schema di collegamento 700/1000W




## INDEX

Pag. 8	Technical data
Pag. 9	Installation
Pag. 10	Connection diagram 300/500W
Pag. 11	Connection diagram 700/1000W




## HOW TO IDENTIFY THE WINDLASS THROUGH THE CODE:

1° EXAMPLE:  
DP2512D

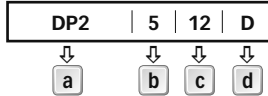

2° EXAMPLE:  
DP21024

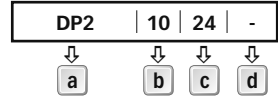

a

Name of the line:  
[ DP2 ]

b

Motor power:

[ 3 ] = 300 W      [ 7 ] = 700 W  
[ 5 ] = 500 W      [ 10 ] = 1000 W

c

Motor supply voltage:

[ 12 ] = 12 V  
[ 24 ] = 24 V

d

Drum:

[ D ] = with drum  
[ - ] = without drum

MODEL	DP2 – / D			DP2 – / D HI SPEED (4)	
MOTOR POWER	300W	500W		500W	
Motor supply voltage	12V	12V	24V	12V	24V
Maximum pull	370 Kg (815,7 lb)	660 Kg (1455,0 lb)		600 Kg (1322,8 lb)	
Maximum working load	120 Kg (264,5 lb)	200 Kg (441,0 lb)	220 Kg (485,0 lb)	170 Kg (374,8 lb)	200 Kg (441,0 lb)
Working load	40 Kg (88,2 lb)	65 Kg (143,3 lb)	70 Kg (154,3 lb)	65 Kg (143,3 lb)	70 Kg (154,3 lb)
Current absorption @ working load (1)	65 A	80 A	40 A	100 A	50 A
Maximum chain speed (2)	29,2 (95,8 ft/min)	28,9 (94,8 ft/min)	28,2 (92,5 ft/min)	43,0 (141,1 ft/min)	42,5 (139,4 ft/min)
Maximum chain speed @ working load (2)	24,4 (73,8 ft/min)	24,3 (59,7 ft/min)	24,1 (63,3 ft/min)	34,5 (93,5 ft/min)	35,0 (91,9 ft/min)
Deck thickness (3)	20 ÷ 30 mm (25/32" ÷ 1" 3/16)				
Weight modell without drum	9,8 Kg (21,6 lb)				
Weight modell with drum	10,7 Kg (23,5 lb)				

MODEL	DP2 – / D			
MOTOR POWER	700W		1000W	
Motor supply voltage	12V	24V	12V	24V
Maximum pull	680 Kg (1499,1 lb)		930 Kg (2050,3 lb)	
Maximum working load	300 Kg (661,4 lb)	320 Kg (705,5 lb)	420 Kg (925,9 lb)	480 Kg (1058,2 lb)
Working load	100 Kg (220,5 lb)	107 Kg (235,9 lb)	140 Kg (308,6 lb)	160 Kg (352,7 lb)
Current absorption @ working load (1)	95 A	50 A	130 A	75 A
Maximum chain speed (2)	22,6 (74,1 ft/min)	25,3 (83,0 ft/min)	31,2 (102,4 ft/min)	30,1 (98,7 ft/min)
Maximum chain speed @ working load (2)	11,6 (38,1 ft/min)	14,4 (47,2 ft/min)	16,5 (54,1 ft/min)	19,1 (62,7 ft/min)
Deck thickness (3)	25 ÷ 50 mm (63/64" ÷ 1" 31/32)			
Weight modell without drum	15,6 Kg (34,3 lb)		16,7 Kg (36,8 lb)	
Weight modell with drum	16,3 Kg (35,9 lb)		17,4 Kg (38,3 lb)	

(1) After an initial period of use.

(2) Measurements taken with a gypsy for a 8 mm chain.

(3) On request, shafts and studs can be supplied for greater deck thicknesses.

(4) Only on request.

GYPSIES	6 mm		7 mm - 1/4"				8 mm		5/16"
Chain size	6 mm	6 mm	7 mm	7 mm	1/4"	1/4"	8 mm	8 mm	5/16"
	DIN 766	ISO**	DIN 766	ISO**	G4	BBB	DIN 766	ISO**	G4
Rope size *	1/2"		1/2"		1/2"		1/2"		1/2"

\* The values in the table refer to a three-strand polyester rope with a rope/chain splice manufactured with the "Quick®" system.

\*\* ISO EN 818-3.

## Models' dimensions on page 26



Quick® reserves the right to introduce changes to the equipment and the contents of this manual without prior notice.

In case of discordance or errors in translation between the translated version and the original text in the Italian language, reference will be made to the Italian or English text.



## BEFORE USING THE WINDLASS READ THESE INSTRUCTIONS CAREFULLY. IF IN DOUBT, CONTACT YOUR NEAREST "QUICK®" DEALER.


- WARNING:** the Quick® windlasses are designed to weigh the anchor. ⚠ Do not use the equipment for other purposes.
- ⚠ Quick® shall not be held responsible for damage to equipment and/or personal injury, caused by a faulty use of the equipment.
  - ⚠ The windlass is not designed for the loads that might occur in extreme weather conditions (storms).
  - ⚠ Always deactivate the windlass when not in use. ⚠ Check that there are no swimmers nearby before dropping anchor.
  - ⚠ The splice between the rope and the chain must be tightly woven for the rope to slide easily into the gypsy shape. For any problem or request, feel free to contact Quick® Technical Service.
  - ⚠ For improved safety we recommend installing at least two anchor windlass controls in case one is accidentally damaged.
  - ⚠ We recommend the use of the Quick® hydraulic-magnetic switch as the motor safety switch.
  - ⚠ Secure the chain with a further device before starting the navigation.
  - ⚠ The contactor unit or reversing contactor unit must be installed in a point protected from accidental water contact.
  - ⚠ After completing the anchorage, secure the chain or rope to fixed points such as chain stopper or bollard.
  - ⚠ To prevent accidental releases, the anchor must be secured. The windlass shall not be used as the only securing device.
  - ⚠ Isolate the windlass from the power system during navigation (switch the circuit breaker off) and lock the chain securing it to a fixed point of the boat.

**THE PACKAGE CONTAINS:** windlass (on deck unit + motorgearbox) - contactor unit - base gasket - drill template - handle - bolts and screws (for assembly) - user's manual - conditions of warranty.


**TOOLS REQUIRED FOR INSTALLATION:** drill and drill bits: Ø 9 mm (23/64") and Ø 11 mm (7/16"); hollow mill: Ø 51 mm (2") and Ø 64 mm (2 1/2"); hexagonal wrench: 13 mm.

**"QUICK®" ACCESSORIES RECOMMENDED:** anchoring RL control board (mod. 800) - Waterproof hand holds R/C (mod. HRC1002) - Foot switch (mod. 900) - Hydraulic-magnetic circuit breaker - Anchor chain counter (mod. CHC1102M and CHC1202M) - Radio control RRC (mod. R02, PO2, H02).

**INSTALLATION REQUIREMENTS:** the windlass must be positioned with the gypsy aligned with the bow roller. Ensure that the upper and lower surfaces of the deck are as parallel as possible. If this is not the case, compensate the difference appropriately (a lack of parallelism could result in a loss of motor power). The deck thickness must be included among the figures listed in the table. In cases of other thicknesses it is necessary to consult a Quick® retailer. There must be no obstacles under deck to the passage of cables, rope and chain; lack of depth of the peak could cause jamming.

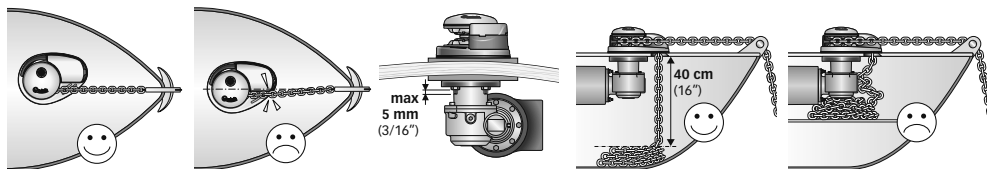

**FITTING PROCEDURE:** when the ideal position has been established, drill four holes using the drilling template provided. Remove excess material from the chain passage, refine and flatten with a specialized product (marine paint, gel coat or two pack epoxy) to assure free passage for both rope and chain. Position the upper section, inserting the gasket between the deck and the base and connect the lower section to the assembly, inserting the shaft into the reduction unit. Fix the windlass by screwing the nuts onto the fixing studs. Connect the supply cables from the windlass to the contactor unit.

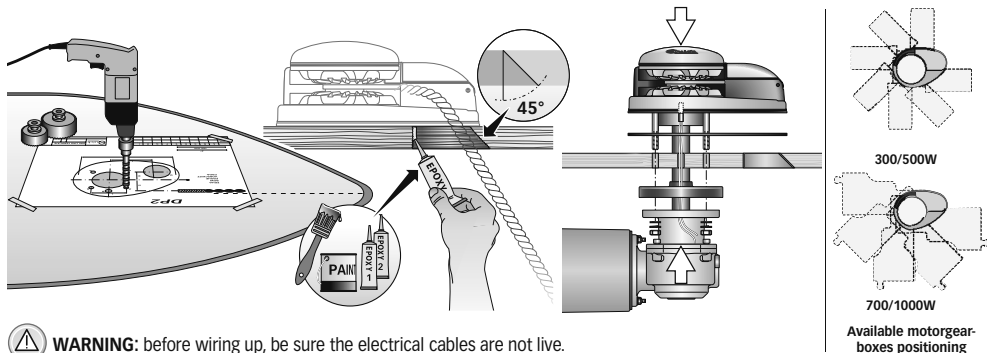

**WARNING:** before wiring up, be sure the electrical cables are not live.




## BASIC SYSTEM DP2 300/500W

SEE PAGE 24  
SHOWING THE MAIN  
CONNECTION DIAGRAM

MULTI-PURPOSE  
WATERTIGHT HAND HELD  
REMOTE CONTROL  
MOD. HRC 1002

WINDLASS

FOOT SWITCHES MOD. 900U AND 900D

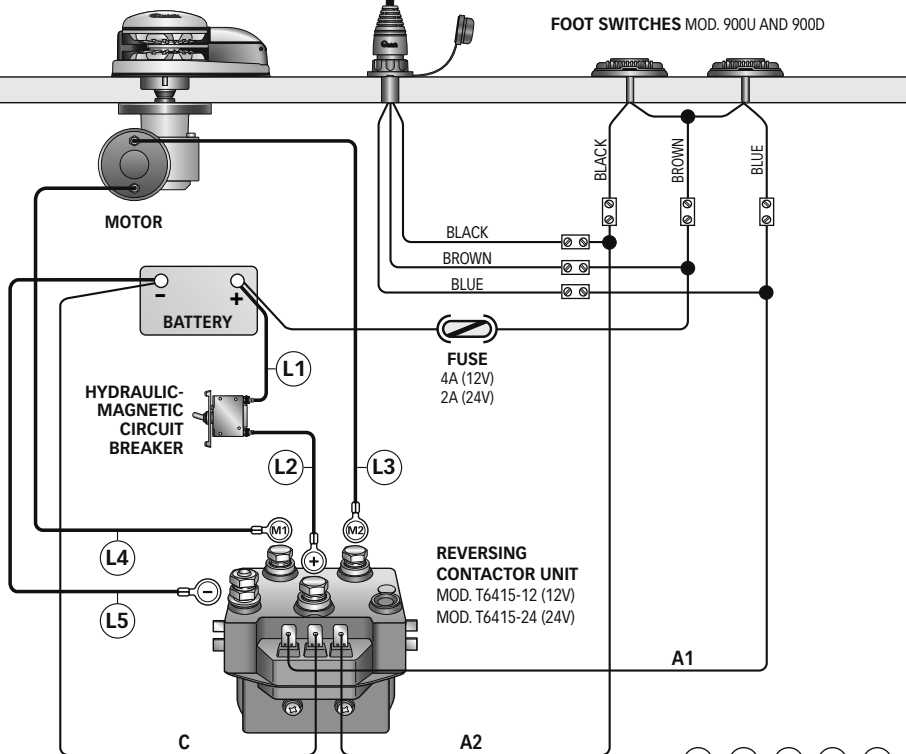

$$L = (L1) + (L2) + (L3) + (L4) + (L5)$$

### QUICK® ACCESSORIES FOR WINDLASS OPERATION



WATERTIGHT HAND HELD  
CHAIN COUNTER



WATERTIGHT  
PANEL  
CHAIN COUNTER



WINDLASSES  
CONTROL  
BOARD



### REMOTE RADIO CONTROLS

RECEIVER



TRANSMITTERS



RADIO POCKET - HANDHELD



# CONNECTION DIAGRAM

GB

## BASIC SYSTEM DP2 700/1000W

SEE PAGE 25  
SHOWING THE MAIN  
CONNECTION DIAGRAM

PULSANTIERA  
MULTIUSO  
MOD. HRC 1002

WINDLASS

MOTOR

BATTERY

HYDRAULIC-  
MAGNETIC  
CIRCUIT  
BREAKER

CONTACTOR UNIT  
MOD. T6315-12 (12V)  
MOD. T6315-24 (24V)

A2

A1

C

### QUICK® ACCESSORIES FOR WINDLASS OPERATION



WATERTIGHT HAND HELD  
CHAIN COUNTER

WATERTIGHT  
PANEL  
CHAIN COUNTER



WINDLASSES  
CONTROL  
BOARD



### REMOTE RADIO CONTROLS

RECEIVER



TRANSMITTERS



RADIO POCKET - HANDHELD

### FOOT SWITCHES MOD. 900U AND 900D

BLACK


BROWN

BLUE

BLACK  
BROWN  
BLUE

FUSE  
4A (12V)  
2A (24V)

$$L = (L1) + (L2) + (L3) + (L4)$$

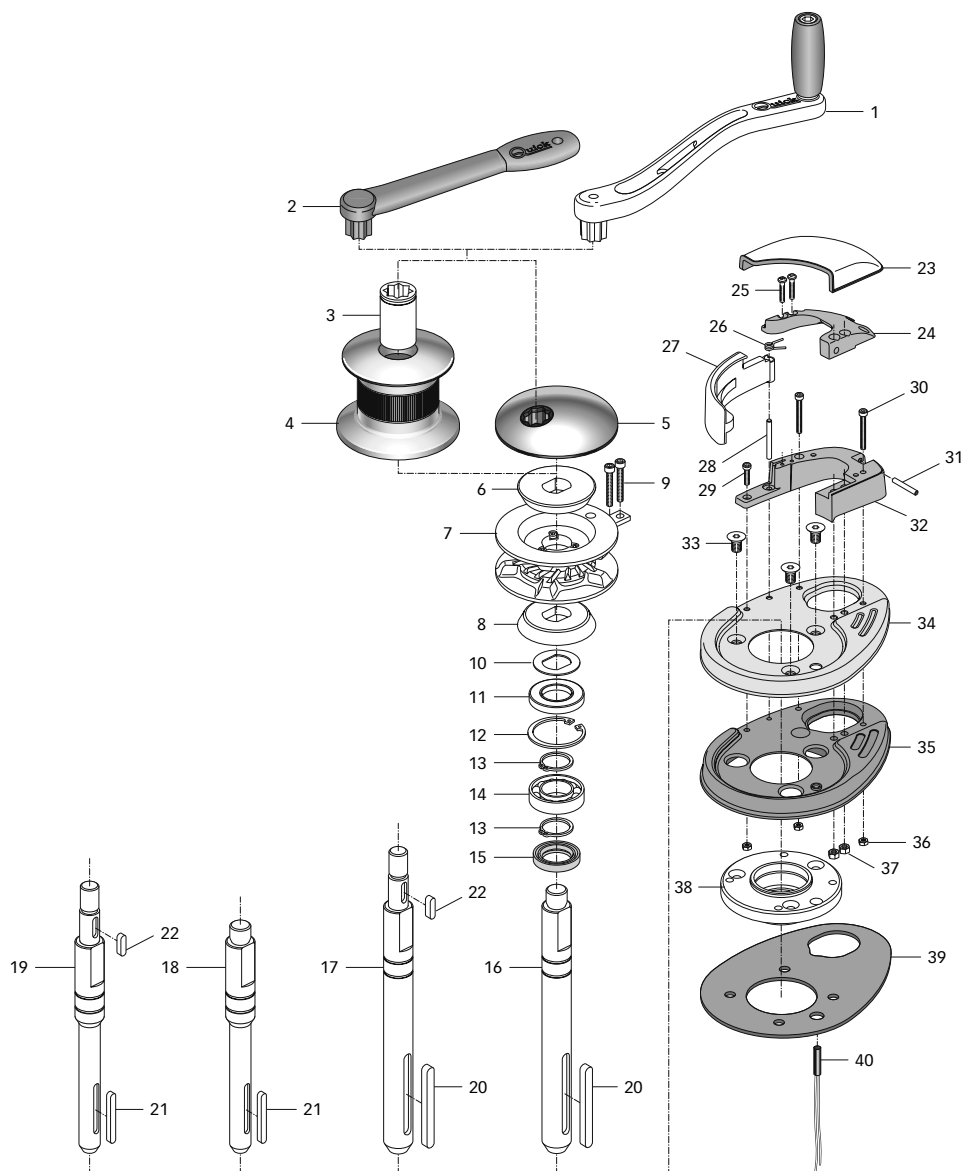



**WARNING:** make sure the electrical power to the motor is switched off when working manually on the windlass. Carefully remove the chain or rope from the gypsy or the rope from the drum.

Quick® windlasses are manufactured with materials resistant to marine environments. In any case, any salt deposits on the outside must be removed periodically to avoid corrosion and damage to the equipment. The parts where salt may have built up should be washed thoroughly with fresh water.

Once a year, the drum and the gypsy are to be taken apart as follows:

## DRUM VERSION

Use the handle (1 or 2) to loosen the bush (3); pull off the drum (4) and the top clutch cone (6); loosen the fixing screws (9) of the rope/chain stripper and remove it. Pull off the gypsy (7).

## NO-DRUM VERSION

Use the handle (1 or 2) to remove the gypsy cover (5); remove the top clutch cone (6); loosen the fixing screws (9) of the rope/chain stripper and remove it and pull off the gypsy (7).

Clean all the parts removed to avoid corrosion, and grease the shaft thread (16, 17, 18 or 19) and the gypsy (7) where the clutch cones (6 and 8) rest (use grease suitable for marine environment).


Remove any oxide deposits from the terminals of the electric motor and the contactor unit; grease them.

POS.	DESCRIPTION	CODE
1	Bent windlass lever 700-1000W	MSH0000000R1
2	Straight windlass lever - nylon 300-500W	PVLVSDN00000
3	Drum bush DP2 chromed	SGMSD0400000
4	Drum - 800W	ZSPMSE0800R3
5	Gypsy cover	MSGB07GX0000
6	Top clutch cone	MSF07G000000
7	Gypsy" 5/16" complete DP2	ZSBDP20516R0
8	Bottom clutch cone	MSF08ASCN000
9	Screw 5*45	MBV0545MXCE0
10	Spring washer	MBR254010X00
11	Oil seal	PGPRL2547700
12	Internal circlip	MBAN4717Y000
13	External circlip	MBAE2520Y000
14	Bearing 6005	MBJ600500000
15	Oil seal	PGPRL2540700
16	Shaft DP2 700/1000W	MSASDP20L0R0
17	Shaft DP2 D 700/1000W	MSASDP2DL0R0
18	Shaft DP2 300/500W	MSASDP20S0R0
19	Shaft DP2 D 300/500W	MSASDP2DS0R0
20	Key	MBH0807080X0
21	Key	MBH0606050X0
22	Key	MBH0606025X0
23	Chain guide cover DP2	-
24	Plastic chain pipe series DP2	PDNCDP20000
25	Screw 3,9*25	MBV03925AXCC
26	Spring for pressure lever	MMTND08ASC00
27	Pressure lever DP2	PDLVTD0P2N00
28	Cylindrical pin	MBSC04040A00
29	Screw	MBV0416MXCEB
30	Screw	MBV0440MXCE0
31	Screw	MBV0430MXVEP
32	Plastic chain pipe series DP2	PDPS0DP20R01
33	Screw	MBV0814MXTSC
34	Stainless steel cover base serie DP2	MSGB0DP2X000
35	Plastic cover insert DP2	PDNCDP20000
36	Nut M4	MBD04MXEN000
37	Nut M5	MBD05MXEN000
38	Aluminium round base DP2	SGMSC0DP2A00
39	Gasket/ DP2 - shaped jig	PGBSDP200000
40	Sensor	KNREEDCL0000






41	Stud 8*060 Ø8	MBP080608X00	57	Gearbox flange gasket TOP TG50	PGFLRDTG50000
42	Gearbox flange gasket TOP TG40	PGFLRDTG4000	58	Gearbox - Quick TG50 1000W	SLMR10TG5000
43A	Gearbox - Quick TG40 500W	SLMR05TG4000	59	Washer	MBR061815X00
43B	Gearbox - Quick TG40 500W HS	SLMR05TG40HS	60	Self locking nut	MBD06MXET000
44	Washer	MBR08X000000	61	O-ring	PGR023000000
45	Grower	MBR08XDE0000	62	Key	MBH050515F00
46	Nut	MBD08MXEN000	63A	Electric motor 700w 12v	EMF071200000
47	Screw	MBV0516MXE00	63B	Electric motor 1000w 12v	EMF101200000
48	Geared motor seal	PGBMR0400000	63C	Electric motor 700w 24v	EMF072400000
49	Key	MBH040415F00	63D	Electric motor 1000w 24v	EMF102400000
50A	Electric motor 300W 12V	EMF031200000	64A	Motor casing watertight 700w	PCCCPM070000
50B	Electric motor 500W 12V	EMF051200000	64B	Motor casing watertight 1000w	PCCCPM100000
50C	Electric motor 500W 24V	EMF052400000	65	Grommet 700/1000w	PCGPMMR00000
51	Flange gasket	PGGPMFN04000	66	Terminal board cover 700/1000w	PCCPPMMR0000
52	Motor casing watertight 300/500W	PCCCPM040000	67	Screw	MBV02213AXSC
53	Poles gasket electric motor	PGGPPM04000	68	Bottom gasket 700/1000w	PGGPMFN00000
54	Bottom protec cover electric motor	PCCPPMFN0400	69	Bottom protec cover 700/1000w	PCCPPMFN0000
55	Screw	MBV03916AXCC	70	Cable outlet	PPM20B000000
56	Stud 8*080 Ø8	MBP080808X00			

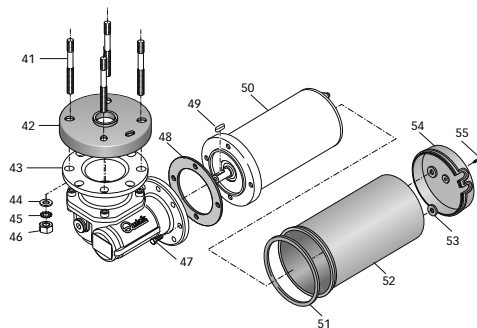

MOTORGEARBOX 300/500W

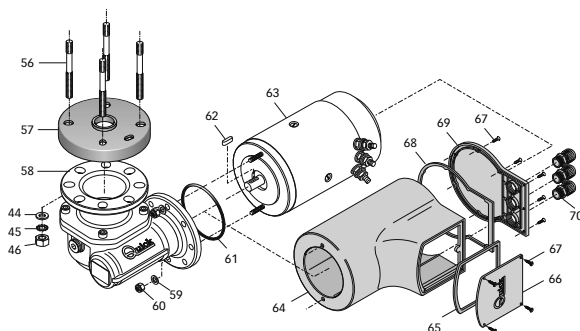

MOTORGEARBOX 700/1000W



### WARNING



**WARNING:** stay clear of the chains, ropes and gypsy. Make sure the electric motor is off when windlass is used manually (even when using the handle to disengage the clutch). In fact people with windlass remote controls (hand-held remote control or radio-controlled systems) might accidentally operate it.



**WARNING:** secure the chain with a device before starting the navigation.



**WARNING:** do not operate the windlass by using the electrical power when the handle is inserted in the drum or into the gypsy cover.



**WARNING:** Quick® recommends using a protection to prevent the engine line from suffering damages due to overheating or shortcircuits. For AC currents the use of a fuse is recommended (details on its dimension are specified in the page of the connection diagram); For DC currents the use of a specific and delayed-action (thermal-magnetic or hydraulic-magnetic) circuit breaker is recommended. The circuit breaker can be used to cut off power to the windlass control circuit and so avoid accidental activation.

### CLUTCH USE

The clutch (6 and 8) provides a link between the gypsy (7) and the main shaft (16, 17, 18 or 19). The clutch can be released (disengagement) by using the handle (1 or 2) which, when inserted in the bush (3) of the drum (4) or into the gypsy cover (5), must be turned counter-clockwise. The clutch will be re-engaged by turning it clockwise (engagement).

#### WEIGHING THE ANCHOR

Turn on the engine. Make sure the clutch is engaged and remove the handle (1 or 2).

Press the UP button on the control provided.

If the windlass stops and the hydraulic magnetic switch (or thermal cutout) has not tripped, wait a few seconds and try again (avoid keeping the button pressed).

If the hydraulic magnetic switch, has tripped, reset it and wait a few minutes before weighing anchor once again.

If, after a number of attempts, the windlass is still blocked, we suggest to move the boat to release the anchor.

Check the upward movement of the chain for the last few meters in order to avoid damages to the bow.


#### CASTING THE ANCHOR

The anchor can be cast by using the electrical control or manually. To operate manually, the clutch (6 and 8) must be disengaged allowing the gypsy (7) to revolve and letting the rope or chain fall into the water.

To slow down the chain, the handle (1 or 2) must be turned clockwise.

To cast the anchor by using the electrical power, press the DOWN button on the control provided. In this manner, anchor casting is under control and the chain and rope unwind evenly.

In order to avoid any stress on the windlass -once the boat is anchored- fasten the chain or secure it in place with a rope.

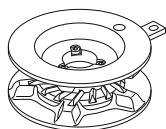**GYPSY - DP2**

OSP GYPSY DP2 1/4"

OSP GYPSY DP2 5/16"

OSP GYPSY DP2 6MM

OSP GYPSY DP2 8MM


**CODE**

FVSSBDP20140A00

FVSSBDP20516A00

FVSSBDP20600A00

FVSSBDP20800A00

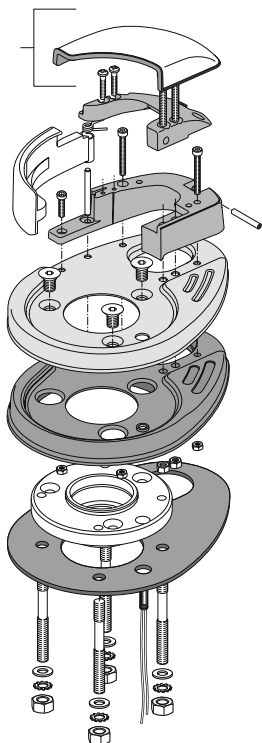\* CHAIN GUIDE  
COVER KIT**COMPLETE BASE - DP2**

OSP WINDLASS BASE SERIES DP2 L COMP

OSP WINDLASS BASE SERIES DP2 S COMP


\* OSP CHAIN GUIDE COVER KIT DP2

**CODE**

FVSSBDP2LC00A00

FVSSBDP2SC00A00

FVSSCPSCDP20A00

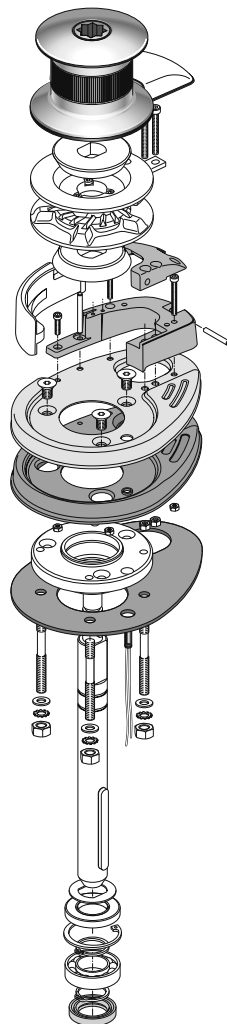**TOP WITH DRUM - DP2**

OSP TOP DP2 D L 1/4"

OSP TOP DP2 D L 5/16"

OSP TOP DP2 D L 6MM

OSP TOP DP2 D L 8MM

OSP TOP DP2 D S 1/4"

OSP TOP DP2 D S 5/16"

OSP TOP DP2 D S 6MM

OSP TOP DP2 D S 8MM

**CODE**

FVSSTDP2DL01A00

FVSSTDP2DL05A00

FVSSTDP2DL06A00


FVSSTDP2DL08A00

FVSSTDP2DS01A00

FVSSTDP2DS05A00

FVSSTDP2DS06A00

FVSSTDP2DS08A00

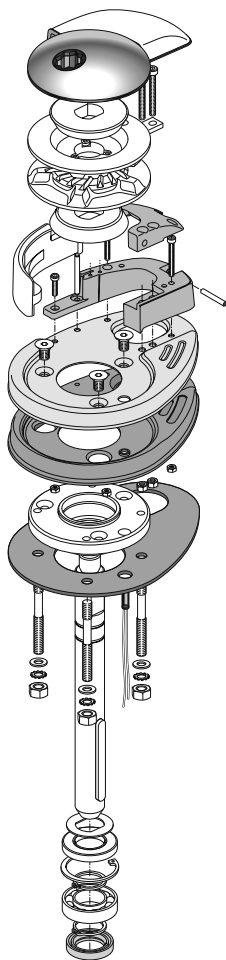**TOP WITHOUT DRUM - DP2**

OSP TOP DP2 L 1/4"

OSP TOP DP2 L 5/16"

OSP TOP DP2 L 6MM

OSP TOP DP2 L 8MM

OSP TOP DP2 S 1/4"

OSP TOP DP2 S 5/16"

OSP TOP DP2 S 6MM

OSP TOP DP2 S 8MM

**CODE**

FVSSTDP20L01A00

FVSSTDP20L05A00

FVSSTDP20L06A00


FVSSTDP20L08A00

FVSSTDP20S01A00

FVSSTDP20S05A00

FVSSTDP20S06A00


FVSSTDP20S08A00

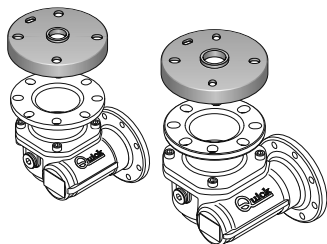**GEARBOX****CODE**

OSP GEARBOX 500W WINDLASS QUICK TG40 FVSSMR05TG40A00

OSP GEARBOX 500W WINDLASS QUICK TG40 HSFVSSMR0540HSA00

OSP GEARBOX 1000W WINDLASS QUICK TG50 FVSSMR10TG50A00

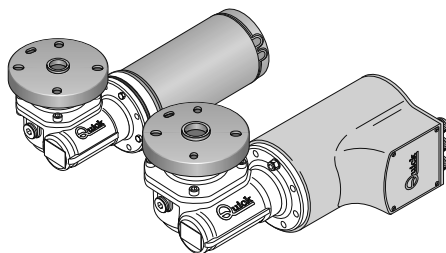**MOTORGEARBOX****CODE**

OSP MOTORGEARBOX 300W 12V QUICK FVSSR0312Q00A00

OSP MOTORGEARBOX 500W 12V QUICK FVSSR0512Q00A00

OSP MOTORGEARBOX 500W 12V QUICK HS FVSSR0512QHSA00

OSP MOTORGEARBOX 500W 24V QUICK FVSSR0524Q00A00


OSP MOTORGEARBOX 500W 24V QUICK HS FVSSR0524QHSA00

OSP MOTORGEARBOX 700W 12V QUICK FVSSR0712Q00A00

OSP MOTORGEARBOX 700W 24V QUICK FVSSR0724Q00A00

OSP MOTORGEARBOX 1000W 12V QUICK FVSSR1012Q00A00

OSP MOTORGEARBOX 1000W 24V QUICK FVSSR1024Q00A00

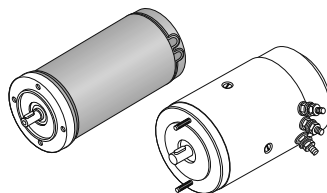**MOTOR****CODE**

OSP WINDLASS MOTOR 300W 12V

FVSSM0312000A00

OSP WINDLASS MOTOR 500W 12V

FVSSM0512000A00

OSP WINDLASS MOTOR 500W 24V

FVSSM0524000A00

OSP WINDLASS MOTOR 700W 12V

FVSSM0712000A00

OSP WINDLASS MOTOR 700W 24V

FVSSM0724000A00

OSP WINDLASS MOTOR 1000W 12V


FVSSM1012000A00

OSP WINDLASS MOTOR 1000W 24V


FVSSM1024000A00



# MAIN CONNECTION DIAGRAM

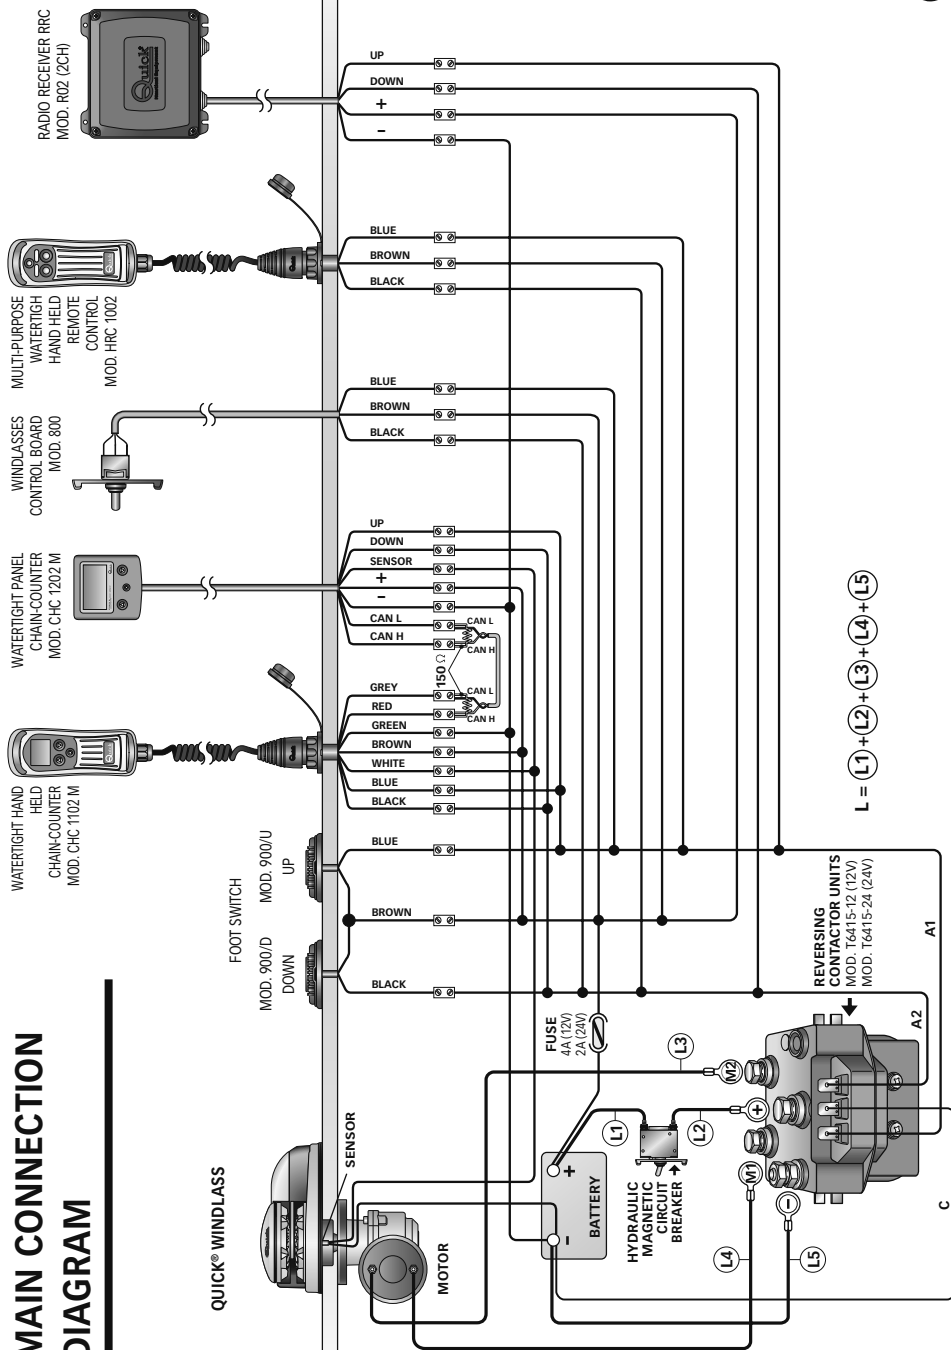


# MAIN CONNECTION DIAGRAM

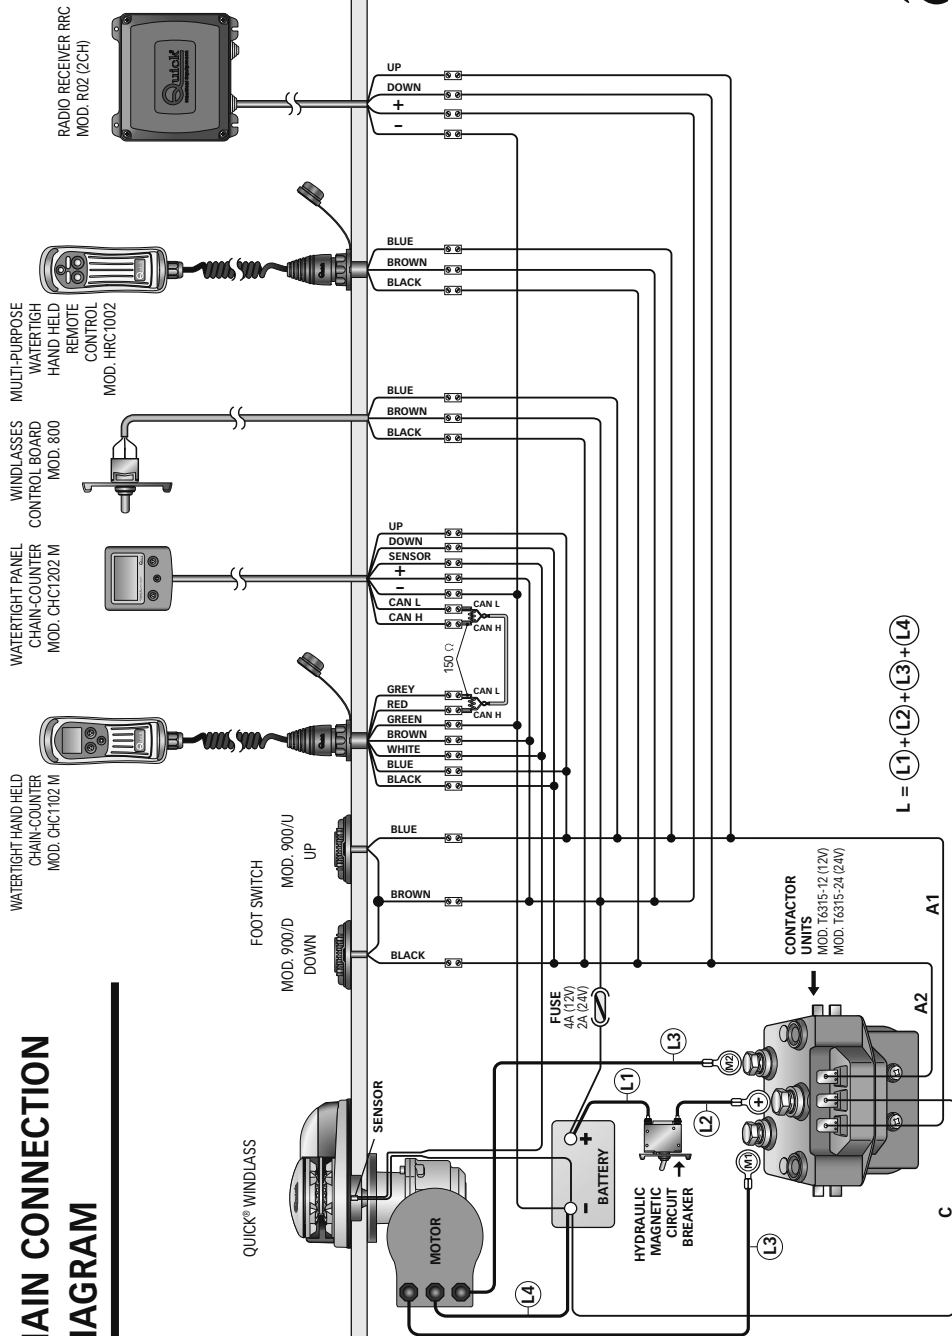





DP2 300W

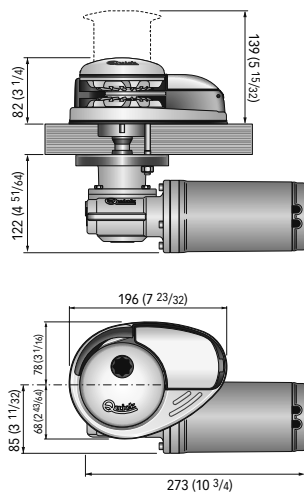


DP2 500W

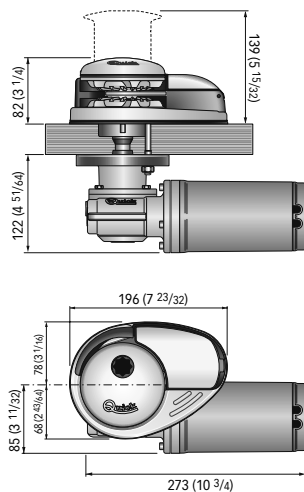

DP2 700W

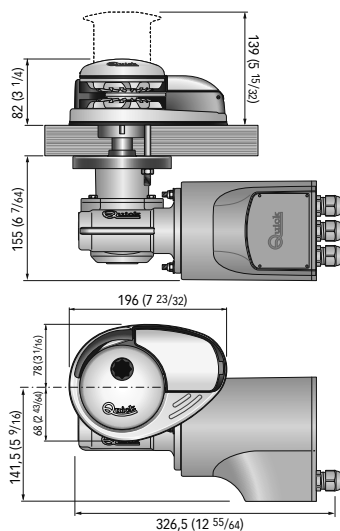


DP2 1000W

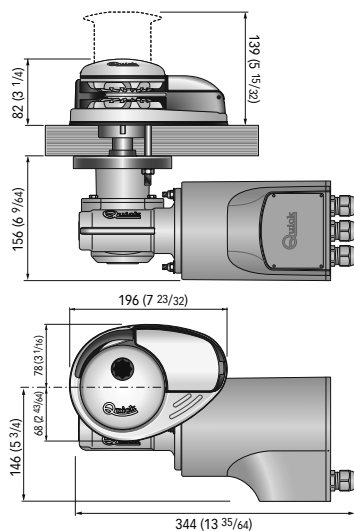

# DP2 SERIE PRINCE

## 300/500/700/1000W

**R001A**

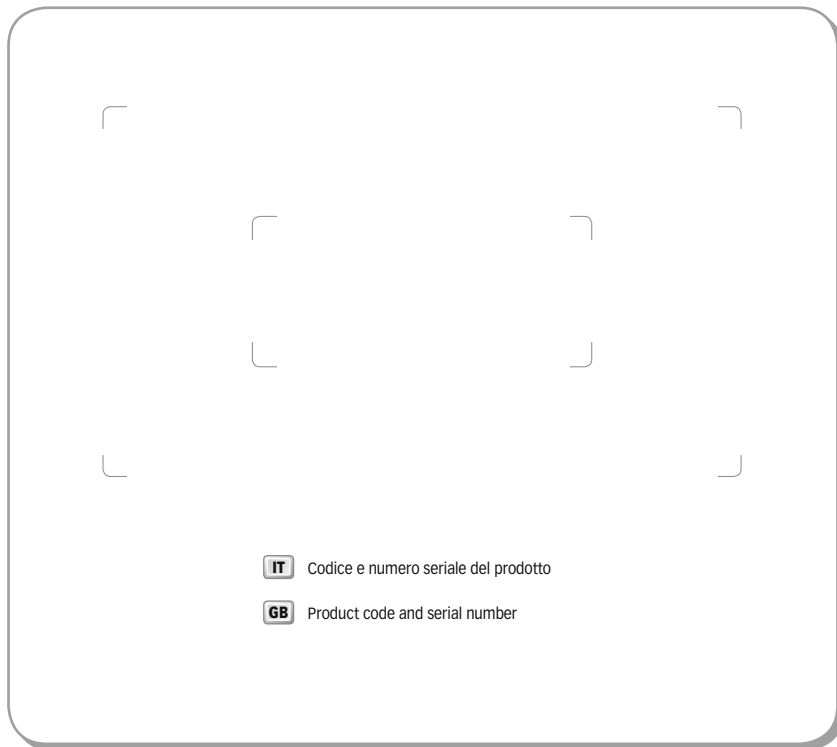

**IT** Codice e numero seriale del prodotto

**GB** Product code and serial number

**Quick**<sup>®</sup>  
Nautical Equipment

QUICK<sup>®</sup> S.p.A. - Via Piangipane, 120/A - 48124 Piangipane (RAVENNA) - ITALY  
Tel. +39.0544.415061 - Fax +39.0544.415047  
[www.quickitaly.com](http://www.quickitaly.com) - E-mail: [quick@quickitaly.com](mailto:quick@quickitaly.com)